

PROGRAMMING MANUAL FOR AC226-01 TRANSMITTER

1. TECHNICAL SPECIFICATIONS




Power supply:	230 VAC / 50 Hz
Frequency:	433.92 MHz
Operating temperature:	~ -20°C - ~ +60°C
Protection degree:	IP65
Average range:	80 meters (in open space), 20 meters (inside buildings)

Works exclusively with motors without built-in radio control.
 Works with all AC series transmitters included in the ALUPROF S.A. offer.
 UP To 20 transmitters can be programed to one motor Each next transmitter will overwrite the first one,.

Company reserves the tolerance of catalog data due the different conditions usage.

2. CONNECTION OF THE TRANSMITTER

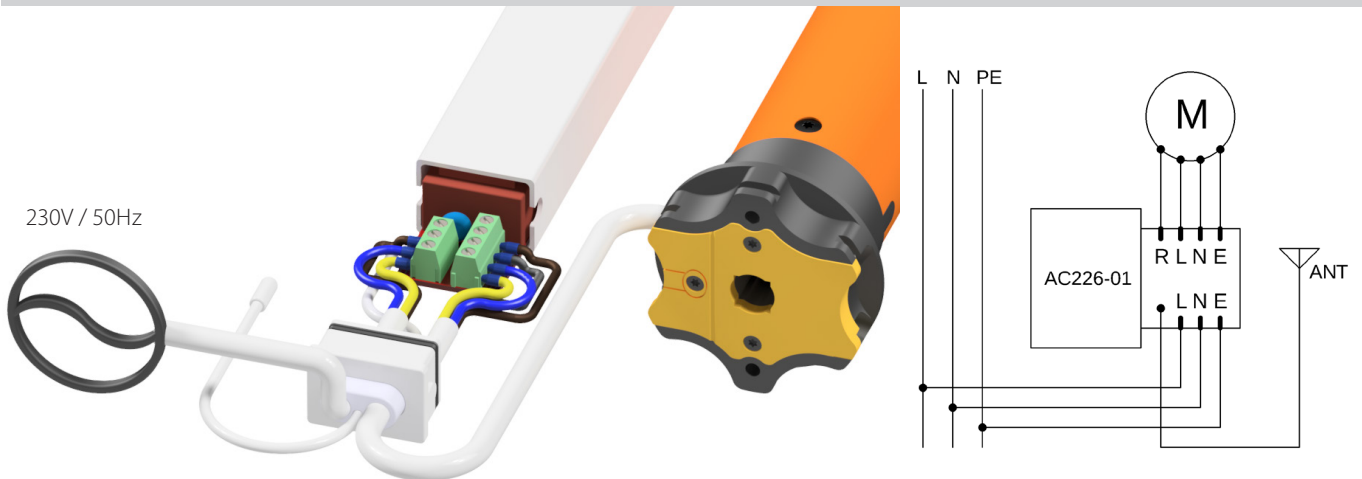


NOTE

- Installation of the transmitter should be carried out by authorized persons (e.g. SEP authorisations to operate electrical devices up to 1 kV).
- The transmitter should be powered by a separate circuit and protected by a quick fuse for example: circuit breaker type B10.




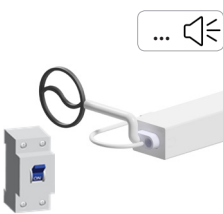


In accordance with the provisions of the Directive of the European Parliament and of the Council 2012/19 / EU of 4 July 2012 on waste electrical and electronic equipment (WEEE), it is prohibited to place of used equipment together with other wastes, marked with crossed out wheeled bin symbol. The users are obliged to transfer their used equipment to a designated collection point for proper processing. The marking means, at the same time, that the equipment was put on the market after 13 August 2005. These legal obligations have been introduced to reduce the amount of waste generated from waste electrical and electronic equipment and to ensure an appropriate level of collection, recovery and recycling. The equipment does not contain any dangerous components, which would have any particularly negative impact on the environment and human health.

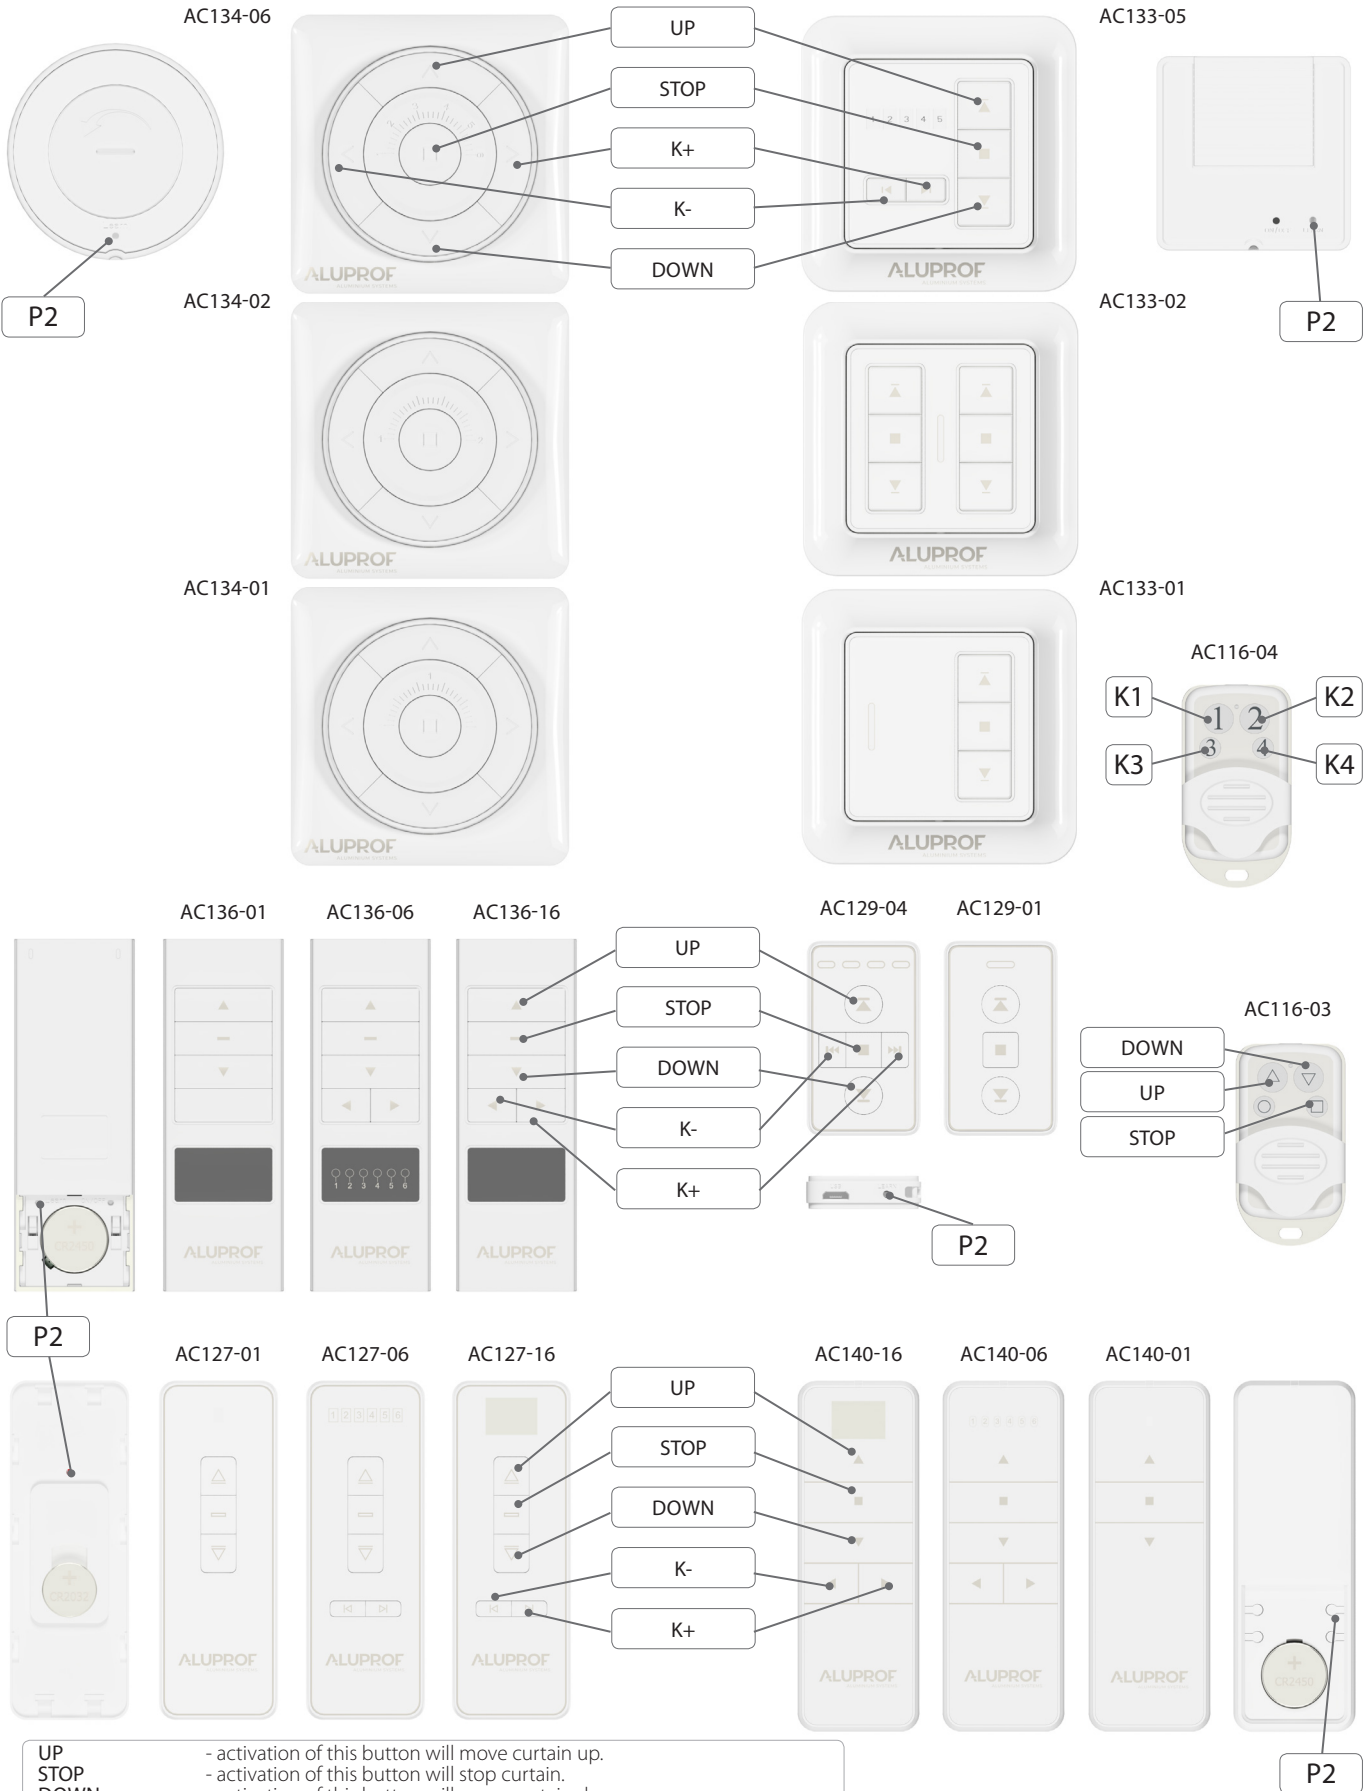3. REMOTE CONTROLLERS







- UP - activation of this button will move curtain up.
- STOP - activation of this button will stop curtain.
- DOWN - activation of this button will move curtain down.
- K1/K2/K3/K4 - individual channel buttons.
- K- - activation of this button will switch to the previous channel.
- K+ - activation of this button will switch to the next channel.
- P2 - activation of this button will switch to programming mode.

4. PROGRAMMING OF THE FIRST TRANSMITTER.




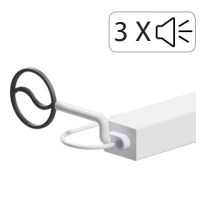
			
<p>Press and hold "TOP" button.</p>	<p>After 3 seconds turn on the power of the transmitter. You will hear an acoustic signal. Release the button.</p>	<p>Press the "UP" button again.</p>	<p>Correct programming of the transmitter will be confirmed by an acoustic signal (3x BIP).</p>

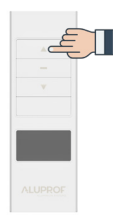5. 200 METERS (IN OPEN SPACE), 35 METERS (INSIDE BUILDINGS)




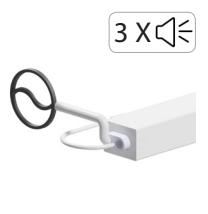
			
<p>With the power on, press and hold down the "STOP" button.</p>	<p>After 5 seconds, you will hear an acoustic signal. Release the button.</p>	<p>Press the „UP" button</p>	<p>Correct programming of the transmitter will be confirmed by an acoustic signal (3x BIP).</p>

 For the AC116-04 transmitter, instead of the "UP" button, press the selected channel number twice.


6. PROGRAMMING THE DIRECTION OF MOVEMENT

			
<p>With the power on, press and hold down the "STOP" button.</p>	<p>After 5 seconds, you will hear an acoustic signal. Release the button.</p>	<p>Press the „DOWN" button</p>	<p>Correct change of the settings will be confirmed by a acoustic signal (3x BIP).</p>


7. ACTIVATION OF THE IMPULSE MODE

			
<p>With the power on, press and hold down the "STOP" button.</p>	<p>After 5 seconds, you will hear an acoustic signal. Release the button.</p>	<p>Press the „STOP" button.</p>	<p>Correct change of the settings will be confirmed by a acoustic signal (3x BIP).</p>


8. ERASING ONE TRANSMITTER.

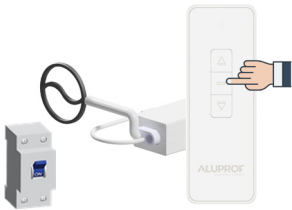


With the power on, press and hold down the "STOP" button.

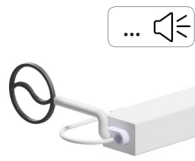

After 5 seconds, you will hear an acoustic signal. Release the button.

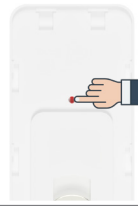


Press the „P2“ butto and hold for 1 second.

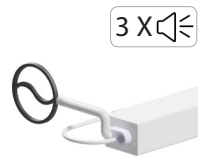


Erasing of the transmitter will be confirmed by an acoustic signal (3x BIP).


9. ERASING ALL OF THE TRANSMITTERS.

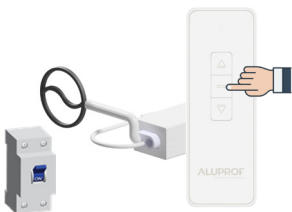


With the power on, press and hold down the "STOP" button.

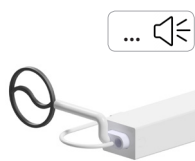

After 5 seconds, you will hear an acoustic signal. Release the button.

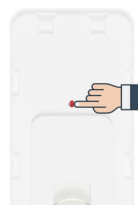

Press the „P2“ button and hold it for 7 seconds.

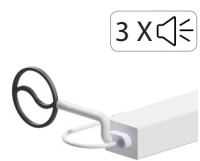

Erasing of the transmitter will be confirmed by an acoustic signal (3x BIP).